



**DOOR FRAME**

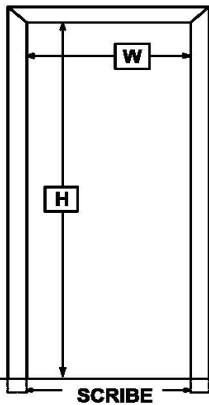


Rough Opening Width =  $W + 1\ 1/2"$   
 Rough Opening Height =  $H + 3/4"$

**DOOR FRAME / SIDELIGHT**

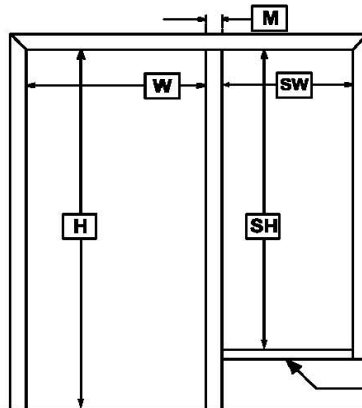

Rough Opening Width =  $W + M + SW + 1\ 1/2"$   
 Rough Opening Height @ Door =  $H + 3/4"$   
 Rough Opening Height @ Side Lite =  $SH + 1\ 1/2"$  OFF THE FLOOR  
 $3/4"$  ON THE FLOOR

**BORROWED LIGHT**

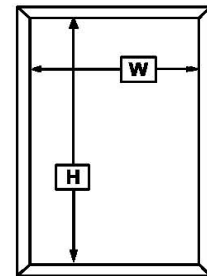

Rough Opening Width =  $W + 1\ 1/2"$   
 Rough Opening Height =  $H + 1\ 1/2"$

**M Size Varies (M=2" with 1" & 2" trim, M=1-1/2" with 1-1/2" trim)**

**SWING**

